

# KARAOKE – SYSTEM AST-250

---

Owner's Manual

*(Version dd. October 15, 2017)*



## Table of contents

1. Precautionary measures.....	4
1.1. During installation.....	4
1.2. During exploitation .....	4
1.3. During prophylaxis and cleaning.....	4
2. Getting to know the device .....	6
2.1. Functional capabilities.....	6
2.2. Package content.....	6
2.3. Front panel .....	6
2.4. Rear panel.....	7
2.5. Remote control panel.....	8
3. Initialising and connection .....	9
3.1. Connection to professional equipment in club .....	9
3.2. Connection to home theatre.....	9
3.3. Connection of background video external source .....	10
3.4. Installation of electronic certificate .....	10
4. Operation modes of AST-250 .....	11
4.1. Mode «Club».....	11
4.1.1. Control widgets .....	12
Search and catalogue .....	12
Reservation .....	<b>Error! Bookmark not defined.</b>
Player .....	<b>Error! Bookmark not defined.</b>
Black list.....	<b>Error! Bookmark not defined.</b>
Effects.....	<b>Error! Bookmark not defined.</b>
Background audio.....	<b>Error! Bookmark not defined.</b>
Background video.....	13
Screen capture.....	<b>Error! Bookmark not defined.</b>
New songs.....	<b>Error! Bookmark not defined.</b>
4.1.2. Function «Setup».....	13
Main setup menu.....	13
Audio .....	13
Video .....	13
Security.....	13
Information .....	13
Network / Local area network (LAN).....	14
Network / Wireless network (Wi-Fi).....	14
4.2. Mode «Home».....	14
4.2.1. Playback of songs .....	14
4.2.2. Songs reservation.....	15
Song reservation .....	15
Songs playback from the list of reserved songs.....	15
Cancellation of reservation «on-the-fly» .....	15
Review and editing of the list of reserved songs .....	15
4.2.3. Songs search .....	15
Beginning of search .....	15
Search results .....	15
Work with search results.....	15
4.2.4. Additional capabilities.....	16
Switching of source of background video.....	16
Selection of playback mode.....	16
New songs.....	16
My songs.....	16
Playback of tracks from USB drive .....	17
Favorites .....	17
TOP 100.....	17
Applause .....	17
4.2.5. Function «Setup».....	17
Main setup menu.....	17
User.....	17

Administrator .....	17
Service .....	17
Information .....	17
Additional updates .....	17
Menu option «User» .....	18
Karaoke .....	18
Background video .....	18
Background audio .....	19
Settings by default.....	19
Menu option «Administrator» .....	19
General Settings .....	19
Microphone processing .....	20
MIDI .....	20
Video.....	20
Network / Local area network (LAN) .....	20
Network / Wireless network (Wi-Fi) .....	20
Security .....	20
Settings by default.....	21
4.2.6. Function «Media player».....	21
Playback of video tracks (tab «Video»).....	21
Playback of audio tracks (tab «Music»).....	21
Viewing images (tab «Slideshow») .....	21
5. Installation of updates (firmware) .....	23
6. Troubleshooting .....	24

## 1. Precautionary measures

### 1.1. During installation

- For connection of AST-250 to electricity mains use only input power with the voltage 220 V and alternative current frequency 50 Hz.
- Install AST-250 at sufficient distance from walls and other objects. Special attention to be in respect of distance between the device and wall which must be not less than 10 centimeters. Breach of this rule may cause overheating of the device and possible flaming.
- Do not install AST-250 in places with strong vibration, on surfaces with incline, on unsteady, high surfaces, in dusty and/or insufficiently ventilated places.
- Do not install AST-250 in places with high humidity; do not put on AST-250 vases, glasses and other objects with liquids.
- Do not install AST-250 close to electric heaters, radiators and other sources of heat, in places with strong and/or frequent changes of temperature, in places with intensive solar heating. It may cause device overheating and its breakage.
- During connection of AST-250 to external equipment carefully read manual for its use. Before connection turn off AST-250 and disconnect power cord from electric circuit.
- During transfer of AST-250 from outside to warm room at cold season in order to prevent appearance of condensate, it is necessary to leave the device at room temperature for 1 – 2 hours and only after that you may connect the device to electric circuit.
- Do not connect power cord to electric circuit before completion of final installation of AST-250.
- Do not connect AST-250 to one power board simultaneously with other devices consuming big power. Check that the total consuming power of connected to power board devices do not exceed 2000W.
- Do not put power cord close to electric heaters and other sources of heat. Do not put on power cord any heavy objects. It may cause damage to power cord and injury by electric current.

### 1.2. During exploitation

- Avoid penetration of water and other liquids to surface and inside AST-250. Do not put objects with liquids on device surface.
- Do not put in AST-250 foreign objects and do not leave them on device surface.
- Do not touch device and power cord by moist hands. Do not touch power cord during thunderstorm.
- Do not deform, twist and heat power cord. In case of damage to power cord replace it immediately.
- During disconnection of power cord from or electric circuit do not pull power cord, hold the plug.
- Do not cover ventilating holes and louvers on top and on each side of AST-250 housing. Do not exploit device in poor ventilated places.
- Do not put on AST-250 heavy objects, do not step on and do not hang up the device.
- During movement of AST-250 to another place disconnect from the device connected units, disconnect power cord from electric circuit. Do not carry the device to another place with foreign objects on it.
- If you do not use AST-250 during long time disconnect power cord from electric circuit.
- In case of fall the device or damage to device housing switch off AST-250, disconnect connected units, disconnect power cord from electric circuit.
- Do not push buttons hard.
- In case of strange sound or smell of smoke immediately disconnect power cord from electric circuit, using thick gloves or dry cloth.
- Do not dismantle and do not repair device independently. Repair to be arranged in authorized maintenance shop.

### 1.3. During prophylaxis and cleaning

- Before cleaning of AST-250 turn off power, disconnect power cord from electric circuit.
- Use for cleaning of the AST-250 surfaces only special detergents for electronics. Do not use organic compounds (gasoline, turpentine, etc.).
- It is recommended not less than once a year to make prophylaxis of the device in authorized maintenance shop.

## 2. Getting to know the device

### 2.1. Functional capabilities

The device AST-250 is designed for:

- playback of karaoke sound tracks and audio files. Supported audio formats: MP3, WAV, MIDI;
- video playback in format Full HD (1080p), MPEG2, MPEG4, h.264, AVC, DivX, xvid.

### 2.2. Package content

Supply package of AST-250 is as follows:

- device AST-250;
- remote control panel;
- batteries for remote control panel (type AA, 2 pieces);
- songs list sorted out by name (title) of singer;
- USB storage with electronic certificate and this manual;
- antenna Wi-Fi;
- HDMI cable, 1,8 m;
- kit for rack panel assembling;
- unit package (box, seal, plastic case).

### 2.3. Front panel

Lay out of control elements and sight control on front panel of the device AST-250:



Figure 1

1. Button for turning on/off the device.
2. USB port.
3. Infrared receiver.
4. Cover of compartment for hard disk.

## 2.4. Rear panel

Lay out of ports on rear panel of the device AST-250:

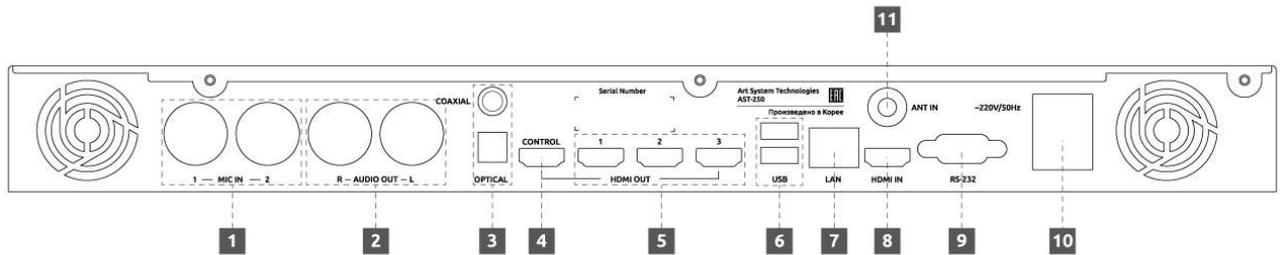


Figure 2

1. Ports for connection of microphones.
2. Port for connection of acoustic system.
3. Digital audio outputs (optical and coaxial).
4. HDMI port for connection of recording engineer monitor.
5. HDMI ports for connection of video equipment.
6. USB port (2 pieces).
7. Port for connection to local computer network.
8. HDMI port for connection of external video source.
9. Port RS-232.
10. Port for connection of power cord.
11. Port for connection of Wi-Fi antenna.

## 2.5. Remote control panel



Figure 3

1. Button box for control of audio track playback.
2. Button box of digit keys.
3. Button for playback start / confirm the action.
4. Button for playback stop / cancel the action.
5. Button for playback of applause record.
6. Button box for playback queuing (reservation).
7. Button for songs searching mode.
8. Button box of coloured function pushbuttons.
9. Button for turning on/off the device.
10. Button box for control of additional functions «Karaoke».
11. Button box for control of «Media Player» functions.
12. Button box for switching the device functions.
13. Button box of navigation buttons.
14. Extended keyboard.

### 3. Initializing and connection

- Before connection of AST-250 with other devices make sure that power of the device and pluggable equipment switched off.
- Do not cover ventilating holes of AST-250 and pluggable equipment for natural air circulation.
- Before connection of AST-250 with other devices read carefully manuals for pluggable equipment.
- During connection of audio and video cables make sure that shape, size and colour of plug correspond to shape, size and colour of connector.

#### 3.1. Connection to professional equipment in club

Approximate scheme of AST-250 connection to professional equipment in club.

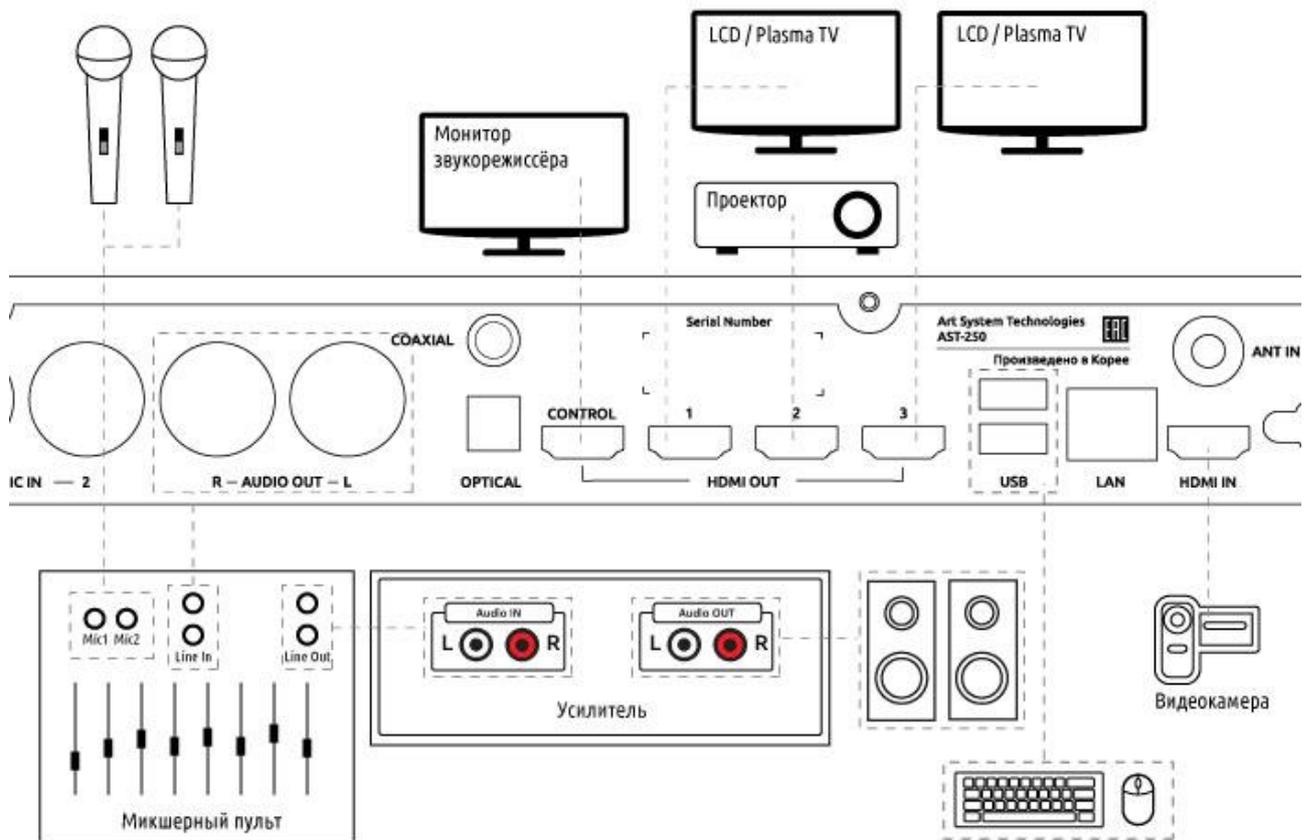


Figure 4

#### 3.2. Connection to home theatre

Approximate scheme of AST-250 connection to home theatre system.

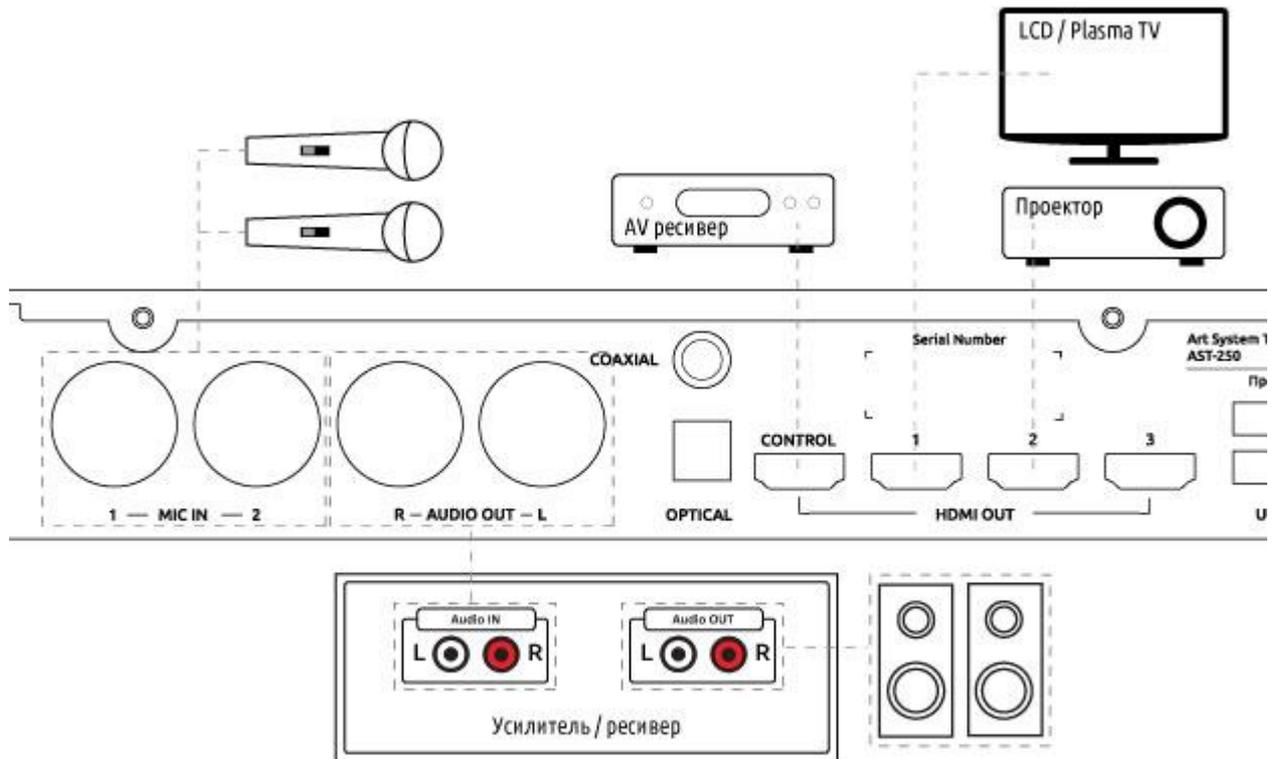


Figure 5

### 3.3. Connection of background video external source

External source of background video (camcorder, DVD player, satellite TV receiver) to be connected through input HDMI IN ([8] on Figure 2). Supported devices are with Full HD 1080p video format.

### 3.4. Installation of electronic certificate

Installation of certificate to be done after connection of peripheral equipment (display or TV set) to AST-250.

For installation of certificate the following actions to be done:

1. Turn on the device, wait for its download finish, insert included in delivery USB drive with the certificate to one of USB ports of the device.
2. On display (TV set) screen connected to the device will appear information message with offer to install the new certificate. For installation press button «Yes» / «Ok», to cancel installation press button «No» / «Cancel».
3. Certificate updating procedure will take a few seconds. Upon completion of updating procedure will be renewed status bar in the lower part of recording engineer's screen (in the «Club» mode) or in the upper right corner of screen for a few seconds will appear the message «Certificate installed» (in the «Home» mode).
4. Remove USB drive from USB port. The device is ready to work.

Installation will not start in case that certificate with the same or later creation time than on USB drive is already installed in the device.

#### 4. Operation modes of AST-250

Karaoke system AST-250 to be in operation in two modes: «Club» and «Home».

Mode «Club» is designed for use in the specialized karaoke clubs. To control the karaoke system AST-250 in «Club» mode it is necessary to connect computer monitor, keyboard and mouse (see scheme on Figure 4).

Mode «Home» is simplified method of control AST-250 using remote control panel, tablet PC or smart phone. In the mode «Home» all HDMI outputs may be used for connection of TV-sets or projection devices. На HDMI-выход «Control» подаётся digital audio signal.

For switching between modes use parameter «Mode» in karaoke system's settings. This parameter is in the window «Main» (in the «Club» mode) or in the setting's choice «Administrator» / «General» (in the mode «Home»).

##### 4.1. Mode «Club»

In order to switch to «Club» mode from «Home» mode go to the settings of karaoke system (button «Settings» remote control panel (button box [12] on Figure 3), after that in menu «Administrator» section «General». Switch parameter «Mode» to «Club» and go out form settings menu (button «Karaoke», button box [12] on Figure 3). Press button «START» ([3] on Figure 3) to confirm changing of mode or «STOP» ([4] on Figure 3) for cancellation. After confirmation of changing the mode karaoke system will automatically reload to mode «Club». For more details about work with settings on «Home» mode see par. 4.2.5.

To control the karaoke system AST-250 in the «Home» mode it is necessary to connect computer monitor, keyboard and mouse (see scheme on Figure 4).

Recommended parameters of monitor:

- Diagonal from 22”;
- Resolution 1920x1080 (Full HD 1080p);
- Availability of digital input (DVI or HDMI).

Main control functions of karaoke system are united in the screen widgets. Widgets may be moved, you can modify their size, hide unnecessary, combine widgets in one window and after that to switch between them using windows.

In the lower part of screen presented status line of karaoke system containing the main data and also support buttons for control of karaoke system (see Table 1).

 
 
 
	Current firmware version of karaoke system
	Month and production year of the last update installed to the system
	Month and production year of the last certified update
	Total quantity of songs played by karaoke system
	Selector of input language
	Selector of light and dark skins of recording engineer's screen.
	Button using for entering the settings of karaoke system
	Button for switching off / reload of karaoke system

Table 1

#### 4.1.1. Control widgets

To switch on or off control widgets click mouse right button on window head of one of the active widgets and after that activate or deactivate the necessary widget.

For movement of widget set mouse pointer to window head of widget, hold pressed left mouse button move window to the necessary place on the screen.

For combining of two widgets in one window move one of widgets to the screen part occupied by another widget. For switching between joint widgets use windows in the lower part of widget's window.

In order to separate joint widgets move one of them to the part of screen free from another widgets.

##### Search and catalogue

Widget is designed to view the karaoke system song catalogue, fast search of necessary soundtrack, start soundtrack playback or put soundtrack to reserve list. Per default widget contains all songs available in karaoke.

For song search start to type the necessary text using keyboard. Search results will appear automatically after entering third symbol. For more precise definition of search results determine search area (in the name, in the song's text, etc.), choose the necessary soundtrack format or song's genre.

To start playback or put in reserve click by the left mouse button on the line with necessary song. In case of necessity adjust parameters of soundtrack playback and after that use the button to start playback or put to the reserve list.

Also playback start and reservation may be done using «dragging over» of necessary song to the window «Player» (for playback) or «Reservation» (for reservation).

##### Reservation

Reservation (queue for playback) is designed for alternating playback of songs. For song reservation press the button or «drag over» the song using mouse from widget «Search and catalogue» to window of widget «Reservation».

To control playback parameters, changing queuing of songs or song deleting from reserve list click left mouse button on the necessary song. Using controls and buttons change playback parameters, move song to the new position or delete song from the list.

Also changing of playback queuing may be done using «dragging over» of song to the necessary position using mouse.

Control «Pause» sets time interval (in seconds) between playback of songs on queue.

##### Player

During playback in this widget shows information about current soundtrack: remaining playback time, current position, parameters (tone, tempo, melody loudness). To control playback and change parameters of playback «on-the-fly» use buttons and tabs. Depending on the current state of karaoke system (stand by or playback) buttons for playback control may be used for different functions: repeated playback of the last played song, pause, resume of playback, etc.

##### Black list

Widget shows the list of withdrawn from circulation songs in karaoke system. In order to put song in black list «drag over» it by mouse from widget «Search and catalogue». Also it is possible to add to black list at once all selected songs from search results by pressing the button «Add search result». In order to delete song from black list click the line with song and press delete button. For temporary switching off the black list use the selector «On/Off».

##### Effects

Widget for control the parameters of microphone inputs. Contains volume controls of soundtrack and microphone inputs, selection of vocal processing effect, fader of chosen effect and parametric equalizer for control of frequency characteristic of microphone inputs.

##### Background audio

Widget is designed for control of playlist background audio. To start and stop playback of tracks in playlist, to control the order of track's playback and also adjustment of playback loudness of background audio use tabs and switches.

#### Background video

Widget contains the list of downloaded to karaoke system video files for background video. Status line of widget shows name of currently playing background video file, elapsed and remaining playback time. Using tabs and switches it is possible to start background video playback, activate or deactivate any background video file, switch to the external signal source of background video (HDMI IN).

#### Screen capture

Widget duplicates picture from monitors (to TV-sets, projection devices, etc.) for clients. Using it звукорежиссёр always may see information on the connected to karaoke system TV-sets and projection devices also in cases when no one is in visibility.

#### New songs

During exploitation repertoire may be widen using downloading and installation of updates. Widget «New songs» is designed for review song lists containing in update. For switching between updates use control tabs «Year» and «Month». Any song from the widget's list may be started for playback or put in the reservation list by the same means as in the widget «Search and catalog».

#### 4.1.2. Function «Setup»

To enter setup menu press symbol  in the lower right corner of recording engineer's screen.

##### Main setup menu

Mode. Switching of modes of operation of karaoke system (see detailed information about modes in par. 4).

Countdown. Switching on/off the countdown. Countdown warns about beginning of painting over text among other after long solo.

Quantity of song lines on the screen. Adjustment of quantity of simultaneously displayed on the screen lines of playing song. Four lines take more space on the screen, but simplify vision of text.

Lines adjustment. Selection of version of song text lines adjustment in horizontal direction.

Text adjustment. Selection of version of song text lines adjustment in vertical direction.

Text platter. Selection of translucent song text platter intensity. The more saturated (dark) platter, the better text readability. At the same time dark platter overrides background video.

Scoring. Switching on/off scoring function for allotting the mark for song execution.

Transliteration of symbols. Switching on/off the function of changing of national alphabets symbols to Roman alphabet.

##### Audio

Melody MIDI. Control of playback volume of prompt melody accompanied the track.

##### Video

HDMI mode. Selection of mode of operation of HDMI outputs of karaoke system.

Attention! Using of modes different from 1920x1080 will cause the substantial deterioration of image quality on the screen of recording engineer. Use the modes different from 1920x1080 only in case of absolute necessity.

A/V delay. Setting of video signal delay time relatively to audio, in milliseconds. Designed for compensation of uninterrupted post processing of signals in some models of TV and home theatre receivers.

##### Security

To protect settings by password. Activation or switching off password request during start of AST-250.

Password for switching on. Field for entering password, requesting during start of AST-250. Password to be composed only with figures and may contains from 1 to 10 symbols.

##### Information

Summary information about karaoke system's main data.

Serial number. Serial number of the device. Also available on rear panel of AST-250 (Figure 2).

Network. Assigned to AST-250 IP address in local area network (by default 192.168.1.101), connection method (wired or wireless), MAC address of net adapter.

Firmware version. Current number of firmware version installed to AST-250.

Played songs. Statistical information about quantity of songs played by the device.

The last certified month. Month and year of the last certified repertoire update. May mismatch with month and year of the last installed to the device repertoire update. For more details about installation of electronic certificate see par. 3.4.

Date of the last update. Month and year of the last installed to the device repertoire update. May mismatch with month and year of the last installed to the device repertoire update.

Date of sale / Warranty. Date of sale and warranty period for AST-250.

Network / Local area network (LAN)

Method of getting an IP address. Selection of network settings determination method for connection of AST-250 to local area network. For automatic determination of connection parameters to local area network use value «Assigning». For independent setting of parameters values use the «Static» method of IP address receiving.

IP address. Setting of IP address of built-in network adapter of AST-250.

Net mask. Setting of net mask.

Gateway. Setting of IP address of gateway by default.

Initial DNS. Setting of IP address of initial DNS server.

Secondary DNS. Setting of IP address of secondary DNS server.

Network / Wireless network (Wi-Fi)

Connection using wireless network is impossible if AST-250 is already connected to local area network by the cable.

Status. Displays the current status of connection to wireless network.

Available networks. The list of available for connection wireless networks.

#### 4.2. Mode «Home»

In order to switch to «Home» mode from «Club» mode go to settings of karaoke system (button  in the status line) and after that to the section «Basic». Switch parameter «Mode» to «Home» and close control box. Press button «Ok» for confirmation of mode changing or «Cancel» to discard the switching. After confirmation of mode changing karaoke system will automatically reload to «Home» mode. More detailed information about settings in «Club» mode see in par. 4.1.2.

Just after switching-on and during periods of time between songs playback the device is in standby mode. In standby mode AST-250 produces background video to the screen of connected display or TV set and background audio track to connected to the device acoustic system in case that in the device set up switched on playback of background video (per default switched on) and audio. In case that playback of background video is switched off to the screen of display transfers «black screen».

In order to enter karaoke function press button «Karaoke» on remote control (button box [12] on Figure 3).

##### 4.2.1. Playback of songs

In standby mode enter song number using button box of digit keys on remote control (button box [2] on Figure 3). Entered number displays in upper left corner of connected to the device display or TV set. On completing of entering on display screen will be short summary of information about the song with entered number including track name and singer and also parameters of track sound: type, melody, tone, tempo and availability of backing vocal. At this moment possible to make correction to some parameters of track sound: volume level of melody (only for MIDI format), tone and tempo playback change using special buttons on remote control (button box [1] on Figure 3). Changing of these parameters is also possible «on-the-fly» during track playback. To put song to the list of chosen songs press «blue» button on remote control (button box of coloured function pushbuttons [8] on Figure 3).

In case of entering number of nonexistent song will appear information message «TRACK NOT EXISTS».

To start song playback press button «START» on remote control ([3] on Figure 3). Press this button during song playback to pause playback («pause») and second pressure will resume playback («pause removal»). Press of this button in standby will start repeated playback of the last played song.

To cancel song playback press button «STOP» on remote control ([4] on Figure 4). Press of this button during song playback will stop playback.

#### 4.2.2. Songs reservation

Reservation (postponed playback) is necessary for alternate songs playback. For songs reservation and control the list of reserved songs is designed button box [6] on remote control (Figure 3).

##### Song reservation

In standby mode enter song number using in the same way as during usual playback. After completion of entering number during displaying of referral information it is possible to change parameters of track sound (for more details, see par. 4.2.1). Changing parameters will take effect during playback of reserved song. Press button «Reserve» on remote control. It is also possible to put track to waiting list for playback using button «RESERVE» on the front panel of the device. To put song involuntarily to the beginning of reserve list («at the head of the queue») press button «Priority reserve» on remote control. After entering song to reserve in the upper right corner of display will appear lettering «Reserve» with songs numbers lead in reserve list and total quantity of reserved songs.

##### Songs playback from the list of reserved songs

To start songs playback from waiting list press button «START» on remote control ([3] on Figure 3). After the end of playback of current song automatically starts playback of song located first in the list. To cancel automatic playback use the function «Settings» (for more details, see par. 4.2.5, menu position «User» / «Karaoke», parameter «Delay of reserve playback»).

##### Cancellation of reservation «on-the-fly»

Enter song number the same as during usual playback. After the end of entering number press button «Reserve cancellation» on remote control (button box [6] on Figure 3). In case that one song with the same number reserved a few times will be cancelled playback of the first song in reserve list. To cancel later reservations use the reserve list (see below).

##### Review and editing of the list of reserved songs

Open reserve list using button «Reserve list» on remote control (button box [6] on Figure 3). For navigation between list lines use arrows on remote control (button box [13] on Figure 3). In order to make actions with the active line (highlights by colour) use coloured functional buttons on remote control (button box [8] on Figure 3). Actions corresponding to pressing each functional buttons are shown in prompt situated in the bottom of reserve list.

In review/editing mode of reserve list it is possible to change parameters of tracks playback (for more details, see par. 4.2.1).

In order to exit the mode of reserve list review press button «STOP» on remote control ([4] on Figure 3).

#### 4.2.3. Songs search

##### Beginning of search

For song search press button «Search» on remote control ([7] on Figure 3) or start to enter search text using extended keyboard on remote control ([14] on Figure 3). Entered text will appear in search box situated in the upper part of display. Using button box of coloured function pushbuttons on remote control (button box of coloured function pushbuttons [8] on Figure 3) set area of search (in name, text of song, etc.), input language, choose desired track format and song genre. Search results will appear automatically after entering the third symbol.

##### Search results

Search results display in the form of list with the following positions: song name, name/title of singer, song number, track format. Maximum number of lines in the list – 1000. If the list with search results contains maximum number of lines and necessary song is not in the list try to specify search parameters. For example, limit area of search,

enter more precise text line for search, etc. If no one song is found according to these parameters during the search the list will be empty.

#### Work with search results

For navigation between lines of the list with search results use arrows on remote control (button box [13] on Figure 3). Song in active line (highlights by colour) may be put in reserve list; it is possible to immediate start song playback, to change parameters of track playback (for more details, see par. 4.2.1). Changes count towards during immediate song playback or during playback of track from reserve list in case that song is in reserve.

In order to exit search mode press button «STOP» on remote control ([4] on Figure 3).

#### 4.2.4. Additional capabilities

##### Switching of source of background video

If external source of background video connected to AST-250 (for more details, see par. 3.3) it is possible using button «BGV» on remote control (button box [10] on Figure 3) to switch between external sources and record of background video on hard disk of the device.

##### Selection of playback mode

AST-250 may automatically play all songs recorded on hard disk of the device. Apart from normal playback mode (for more details, see par. 4.2.1) there are two modes of automatic playback: serial mode and random playback. Selection of the necessary playback mode to be done by serial push of button «Playback mode» on remote control (button box [10] on Figure 3). Current mode displays in information message in upper right corner of display. In serial mode and random playback information message displays constantly, in normal mode this message will disappear after a few time.

To start playback in selected automatic playback press button «START» on remote control ([3] on Figure 3), to stop playback press button «STOP» on remote control ([4] on Figure 3).

##### New songs

During exploitation repertoire may be widen using downloading and installation of updates. In order to see songs lists containing in update press button «New songs» (button box [10] on Figure 3) on remote control. Information about work with lists and possible actions see in par. 4.2.3, section «Work with search results». For navigation between updates use buttons «<» (left) and «>» (right) (button box [13] on Figure 3).

##### My songs

In this model of karaoke system it is possible to add to repertoire up to one hundred tracks not included in the main songs catalogue. To see the list of earlier downloaded tracks press button «My songs» (button box [10] on Figure 3) on remote control.

For navigation between lines of the list use arrows on remote control (button box [13] on Figure 3). With the song in active line (highlights by colour) it is possible to make the following actions:

- to start playback (button «START»);
- to put in reserve list (buttons «Reserve» or «Priority reserve»);
- to enter or edit song name and name (title) of singer (yellow button in button box of coloured function pushbuttons [8] on Figure 3);
- to delete song from the system (red button in button box of coloured function pushbuttons [8] on Figure 3).

To download new track make the following actions:

1. Record track and (in case of using CD+G format) supporting image file to root directory of USB drive.
2. Connect USB drive to USB port on the front panel of karaoke system.
3. Press button «USB drive» (blue button in button box of coloured function pushbuttons [8] on Figure 3).
4. Locate cursor on the name of necessary file, press button «Add to my songs» (green button in button box of coloured function pushbuttons [8] on Figure 3). Will start copying of the necessary files.

5. Wait for the end of copying procedure. For backspacing to the list «My songs» press button «Return to my songs» (blue button in button box of coloured function pushbuttons [8] on Figure 3).

To every downloaded track automatically assigns a number within the limits from 11000 to 11099. This number afterwards may be used to start track playback (for more details, see par. 4.2.1).

#### Playback of tracks from USB drive

In case that on the connected to USB port of karaoke system USB drive available files with supported format of musical tracks, then each of these tracks will receive internal number within the limits from 11500 to 11599. This number may be used to start track playback (for more details, see par. 4.2.1) for as long as USB drive will be disconnected from USB port of the system.

To see the list of tracks available for playback and also definition of current number of one or another track press button «My songs» (button box [10] on Figure 3) and after that button «USB drive» (blue button in button box of coloured function pushbuttons [8] on Figure 3).

#### Favorites

To display the list of favorites (songs) press button «Favorites» on remote control (button box [10] on Figure 3). Information about work with lists and possible actions see in par. 4.2.3, section «Work with search results».

#### TOP 100

Pressing on button «TOP 100» on remote control (button box [10] on Figure 3) will display on display screen list of the most frequently playing songs by the device. The most frequently playing songs are situated at the top of list.

#### Applause

During pressing the button «Applause» on remote control ([5] on Figure 3) AST-250 will play recording of the sound of applause. Sound of applause do not interrupt song playback, it plays simultaneously with track playback (overlap). Applause also may be started in standby mode. The next pressings during applause record playback ignore.

#### 4.2.5. Function «Setup»

To enter setup menu press button «Setup» on remote control (button box [12] on Figure 3).

All actions in «Setup» mode to be done with remote control (Figure 3). For navigation between setup menu options use buttons with arrows (button box [13] on Figure 3). To enter the necessary setup menu option use button «OK» (button box [13] on Figure 3) or «START» ([3] on Figure 3), to go to previous menu option use button «STOP» ([4] on Figure 3).

For navigation between setup menu options use buttons with arrows up/down, for changing settings use buttons with arrows right/left (button box [13] on Figure 3). If necessary, use extended keyboard (button box [14] on Figure 3) or buttons with figures (button box [2] on Figure 3).

#### Main setup menu

##### *User*

In this menu section presented global configuration influenced over the work of karaoke system in «Karaoke» mode.

##### *Administrator*

There are extended setup options of the device in this menu section. This menu section is protected by password. To enter the section type the password «1234». Password request will be one time after every restart of karaoke system.

##### *Service*

This menu section designed only for employees of specialized maintenance shops.

##### *Information*

Summary information about karaoke system's main data.

Serial number. Serial number of the device. Also available on rear panel of AST-250 (Figure 2).

Date of sale / Warranty. Date of sale and warranty period AST-250.

Firmware version. Current number of firmware version installed to AST-250.

Network. Assigned to AST-250 IP address in local area network (by default 192.168.1.101), connection method (wired or wireless), MAC address of net adapter.

Played songs. Statistical information about quantity of songs played by the device.

The last certified month. Month and year of the last certified repertoire update. May mismatch with month and year of the last installed to the device repertoire update. For more details about installation of electronic certificate see par. 3.4.

Date of the last update. Month and year of the last installed to the device repertoire update. May mismatch with month and year of the last installed to the device repertoire update.

#### *Additional updates*

Displaying of additional updates list using national languages installed to karaoke system.

Menu option «User»

#### *Karaoke*

Countdown. Switching on/off the countdown. Countdown warns about beginning of painting over text among other after long solo.

Theme. Selection of karaoke system user interface colour scheme and painting over song's text.

Reservation playout delay. Selection of pause duration before start of playback the next song from list of reserved songs. For more details about reservation, see par. 4.2.2.

Quantity of song lines on the screen. Adjustment of quantity of simultaneously displayed on the screen lines of playing song. Four lines take more space on the screen, but simplify vision of text.

Lines adjustment. Selection of version of song text lines adjustment in horizontal direction.

Text adjustment. Selection of version of song text lines adjustment in vertical direction.

Text platter. Selection of translucent song text platter intensity. The more saturated (dark) platter, the better text readability. At the same time dark platter overrides background video.

Extended information. Switching on/off detailed information about song in standby mode, before its playback.

Scoring. Switching on/off scoring function for allotting the mark for song execution.

#### *Background video*

In this menu section it is possible to see the list of downloaded to hard drive video files for background video playback, activate or switch off necessary video file, to download new video files to hard drive of the device (up to 10 video files).

Music video alignment. Switching on/off songs accompaniment by original singer's music video as background video.

Downloading of video files to be done as follows:

1. Download to USB drive one or a few video files in formats AVI, MKV or MPEG.
2. Insert USB drive to USB port.
3. Locate cursor on one of free cells in the list of video files. If cursor locates on occupied cell video file presented on hard drive of the device will be replaced by the new one.
4. Press yellow button «Add/change» (button box of coloured function pushbuttons [8] on Figure 3). Will display dialog box «Add file» with the list of connected to the device USB drives.
5. Locate cursor on line with name of necessary USB drive and press «OK» (button box [13] on Figure 3) for displaying of the list of files available for copying.
6. Locate cursor on line with file for copying and confirm option by pressing yellow button «Add file» (button box of coloured function pushbuttons [8] on Figure 3). Will start copying of video file to hard drive of the device.

***IMPORTANT: do not disconnect USB drive from USB port  
before the end of copying process.***

On completion of copying the name of downloaded video file will appear in the list of downloaded to hard drive of the device video files.

In order to delete unnecessary video file set cursor on line with this file and press red button «Delete», then confirm deleting by pressing on green button «Yes». Press red button «NO» for rejection of deleting (button box of coloured function pushbuttons [8] on Figure 3).

For activation or stop of playback of background video file set cursor on line with the necessary video file and press button «OK» (button box [13] on Figure 3).

#### *Background audio*

In this menu section it is possible to see the list of downloaded to hard drive catalogs with MP3 files, which may be played as background audio, activate or switch off necessary file catalog, to download new audio files to hard drive of the device or to delete unnecessary files.

Background audio. Switching on/off playback of background audio in pauses between songs playback.

Remember position. If this parameter is switched on playback of background audio will be renewed from the position when it was interrupted.

Volume of background audio. Control of playback volume of background audio relatively to general volume, set in karaoke system, in percents.

Downloading of catalogs with audio files to be done as follows:

1. Make on empty USB drive new folder, write to it audio files in MP3 format.
2. Insert USB drive to USB port.
3. Locate cursor on one of free cells in the list of catalogs. If cursor locates on occupied cell presented on hard drive of the device catalog will be replaced by the new one.
4. Press yellow button «Add/change» (button box of coloured function pushbuttons [8] on Figure 3). Will display dialog box «Add file» with the list of connected to the device USB drives.
5. Locate cursor on line with name of necessary USB drive and press «OK» (button box [13] on Figure 3) for displaying of the list of folders available for copying.
6. Locate cursor on line with folder for copying and confirm option by pressing yellow button «Add file» (button box of coloured function pushbuttons [8] on Figure 3). Will start copying of audio files to hard drive of the device.

***IMPORTANT: do not disconnect USB drive from USB port  
before the end of copying process.***

On completion of copying the name of downloaded folder with audio files will appear in the list of downloaded to hard drive of the device folders.

In order to delete unnecessary catalog with audio files set cursor on line with the name of this catalog and press red button «Delete», then confirm deleting by pressing on green button «Yes». Press red button «NO» for rejection of deleting (button box of coloured function pushbuttons [8] on Figure 3).

#### *Settings by default*

This menu section is designed to reset main parameters of user-definable AST-250 settings to recommended by manufacturer settings (delivery settings). Reset of settings does not affect changes done in the menu option «Administrator».

Menu option «Administrator»

To enter this menu option type the password «1234». Password request will be one time after every restart of karaoke system.

#### *General Settings*

Mode. Switching the mode of operation of karaoke system (detailed information about modes of operation see in the item 4).

Language. Selection of the language of interface and karaoke system messages.

Transliteration of symbols. Switching on/off the function of changing of national alphabets symbols to Roman alphabet.

Club logo demonstrates during pauses between tracks playback. Logo image to be in PNG format with the dimensions 130 pixels width and 76 pixels height. To download logo image do the following actions:

1. Record to USB drive file with logo image.
2. Insert USB drive to one of USB ports of karaoke system.
3. Press yellow button «Add/change» (button box of coloured function pushbuttons [8] on Figure 3). Will display dialog box «Add file» with the list of connected to the device USB drives.
4. Locate cursor on line with name of necessary USB drive and press «OK» (button box [13] on Figure 3) for displaying of the list of files available for copying.
5. Locate cursor on line with file for copying and confirm option by pressing yellow button «Add file» (button box of coloured function pushbuttons [8] on Figure 3). Will start copying of logo image to hard drive of the device.

***IMPORTANT: do not disconnect USB drive from USB port  
before the end of copying process.***

On completion of copying the image of downloaded logo will display on screen.

In order to delete logo press red button «Delete», then confirm deleting by pressing on green button «Yes». Press red button «NO» for rejection of deleting (button box of coloured function pushbuttons [8] on Figure 3).

#### *Microphone processing*

Microphone. Changing of sensitivity of microphone inputs for using different types of microphones (wire / wireless).

Balance. Changing of incoming to microphone inputs of karaoke system signal levels correlation.

Frequency HF/MF1/MF2/MF3/LF. Selection of central frequency from HF (6500 Hz – 12500 Hz) / MF (125 Hz – 5000 Hz) / LF (35 Hz – 100 Hz) frequency range for adjustment.

Level HF/MF1/MF2/MF3/LF. Volume of amplification/signal depression in the selected frequency range HF/MF1/MF2/MF3/LF.

Quality factor MF1/MF2/MF3. Value of quality factor in the selected frequency range MF1/MF2/MF3.

#### *MIDI*

Melody. Control of playback volume of prompt melody accompanied the track.

#### *Video*

HDMI/Component mode. Selection of mode of operation of component and HDMI outputs of karaoke system.

A/V delay. Setting of video signal delay time relatively to audio, in milliseconds. Designed for compensation of uninterruptible post processing of signals in some models of TV and home theatre receivers.

#### *Network / Local area network (LAN)*

Method of getting an IP address. Selection of network settings determination method for connection of AST-250 to local area network. For automatic determination of connection parameters to local area network use value «Assigning». For independent setting of parameters values use the «Static» method of IP address receiving.

IP address. Setting of IP address of built-in network adapter of AST-250.

Net mask. Setting of net mask.

Gateway. Setting of IP address of gateway by default.

Initial DNS. Setting of IP address of initial DNS server.

Secondary DNS. Setting of IP address of secondary DNS server.

#### *Network / Wireless network (Wi-Fi)*

Connection using wireless network is impossible if AST-250 is already connected to local area network by the cable.

Status. Displays the current status of connection to wireless network.

Available networks. The list of available for connection wireless networks. In order to connect to wireless network locate cursor using arrows on the line with necessary network and press button «OK» (button box [13] on Figure 3).

#### *Security*

Password for switching on. Field for entering password, requesting during start of AST-250. Password to be composed only with figures and may contains from 1 to 10 symbol.

To protect settings by password. Activation or switching off password request during start of AST-250.

Password for settings. Field for password requesting during entering settings mode. Password to be composed only with figures and may contains from 1 to 10 symbol.

To protect settings by password. Activation or switching off password request during entering settings mode.

#### *Settings by default*

This menu section is designed to reset main parameters of administrative AST-250 settings to recommended by manufacturer settings (delivery settings). Reset of settings does not affect changes done in the menu option «User».

### 4.2.6. Function «Media player»

Function «Media player» allows to playback video tracks, audio tracks and to view image files in «slideshow» mode from external USB drive connected to USB port of the device. To switch to «Media player» mode press button «Media» on remote control (button box [12] on Figure 3).

For navigation between tabs «Video», «Music» and «Slideshow» use navigating buttons on remote control (button box [13] on Figure 3).

#### Playback of video tracks (tab «Video»)

Supported formats of video files: AVI, MKV, MP4.

Insert USB drive to USB port of the device ([6] on Figure 1). For navigation between file catalogs and files, presented on USB drive use navigating buttons on remote control (button box [13] on Figure 3). Choose video file to see and press button «OK» to start playback.

Playback control to be done by navigating buttons on remote control (button box [13] on remote control). Buttons with arrows right/left «rewind» video to 30 seconds forward and backward correspondingly. Buttons with arrows up/down «rewind» video approximately to 2% of the total length of film. Button «OK» turns on pause and resumes playback.

#### Playback of audio tracks (tab «Music»)

Supported formats of audio files: MP3, WAV.

Insert USB drive to USB port of the device ([6] on Figure 1). For navigation between file catalogs and files presented on USB drive use navigating buttons on remote control (button box [13] on Figure 3). Choose audio file to listen and press button «OK» to start playback. Playback of the next audio file in current file catalog on USB drive starts automatically.

Playback control to be done by navigating buttons on remote control (button box [13] on remote control). Buttons with arrows right/left «rewind» audio track to 30 seconds forward and backward correspondingly. Buttons with arrows up/down «rewind» audio track approximately to 2% of its total length. Button «OK» turns on pause and resumes playback.

Playback control to be done by navigating buttons on remote control (button box [11] on remote control). Buttons >>| and |<< start playback of the next or previous audio track correspondingly.

#### Viewing images (tab «Slideshow»)

Supported formats of image files: JPG.

Insert USB drive to USB port of the device. For navigation between file catalogs and files presented on USB drive use navigating buttons on remote control (button box [13] on Figure 3). Choose image to view and press button «OK» to start slideshow. Images automatically change every 15 seconds.

Playback control to be done by navigating buttons on remote control (button box [11] on remote control). Buttons >>| and |<< start playback of the next or previous image correspondingly. Button >|| suspends («pause») or resumes automatic image changing.

## 5. Installation of updates (firmware)

It is recommended to regularly check availability of the new versions of software (firmware) updates for the device and to renew these updates timely.

For independent updating of firmware make the following actions:

1. Download file with the last firmware update in Personal Area (<http://www.astupdate.com/>), section «Software and documentation».
2. Save the file with update on empty USB drive.
3. Turn on the device, wait for its loading, insert USB drive with update to USB port on the front panel of the device.
4. On display (TV set) screen connected to the device will appear information message with request to renew software. For continuation press green button «Yes», for rejection of installation press red button «NO» (button box of coloured function pushbuttons [8] on Figure 3).
5. Updating process takes a few minutes. On completion of the procedure the device will automatically reload, whereupon it is ready to work.

***IMPORTANT: do not disconnect USB drive from USB port  
before the end of copying process.***

6. Disconnect USB drive from USB port.

In case that later version of software (firmware), than presented on USB drive, is already installed to the device, update will not start.

## 6. Troubleshooting

In case of the device faultiness before applying to specialized maintenance shop it is recommended to learn the information presented in below table. The stated actions will help to determine possible cause of faultiness and to avoid it in future.

Check and in case of necessity install the latest version of software (firmware) to the device.

<b>Indications of faultiness</b>	<b>Method of elimination</b>
The device not turns on.	Check connection of the power cord to grid socket, availability of voltage in mains supply.
No picture, corrupt picture.	Make sure that display or TV set properly connected to the device. Check regularity of height-to-width aspect ratio on TV set screen.
No sound, corrupt sound.	Check regularity of connection of the device to loudspeaker system.
Remote control does not work.	Check maintenance batteries polarity in remote control (+ and -). It may be that charge in batteries finished, replace batteries to new ones. Direct remote control towards to remote control signal receiver. Make sure that work with remote control is on the distance no more than 7 m from the device. Remove all unnecessary objects between remote control and remote control signal receiver.
The device does not react to pushing buttons on the front panel and also on remote control.	Reload the device. For that turn off device power (press and keep pushing for a few seconds turn on button) and again turn on not earlier then after 10 seconds after turning off. Device work may be interrupted due to static electricity, near lightning or other external factors.
Symbols on TV set screen do not display or display partly.	Make sure that regularity of screen type is according to owner's manual of TV set.
The device does not load.	Turn off device power and after 10 seconds turn on again. It may be formation of condensate inside the device due to temperature difference. In that case dry up the device during 1-2 hours at room temperature.
Song's number entered correctly, but track does not playback.	Make sure that downloaded update with the song with entered number.
Track playbacks, but playback only the first 1.5 minutes.	Update with this track is not certified. Download and install the renewed certificate.

<p>On the screen constantly displays message «Error 101» or «Error 102»</p>	<p>Immediately contact specialized maintenance shop.</p>
---	--